



# NMD50 – Manual Cassette Removal

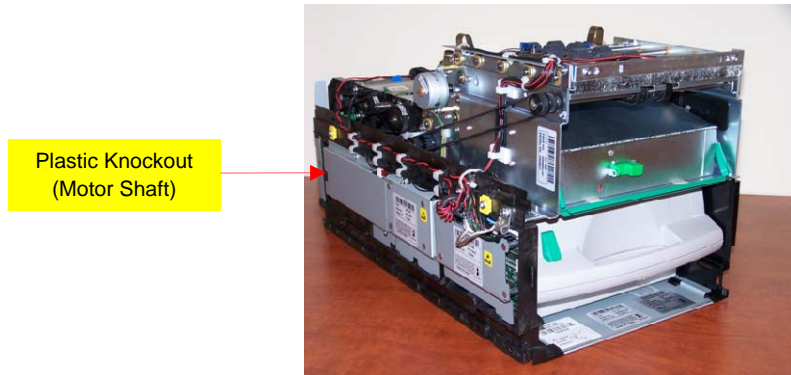

1. To remove a locked cassette from the Bill Dispenser unit, a plastic knockout needs to be removed with a small flat blade screwdriver.

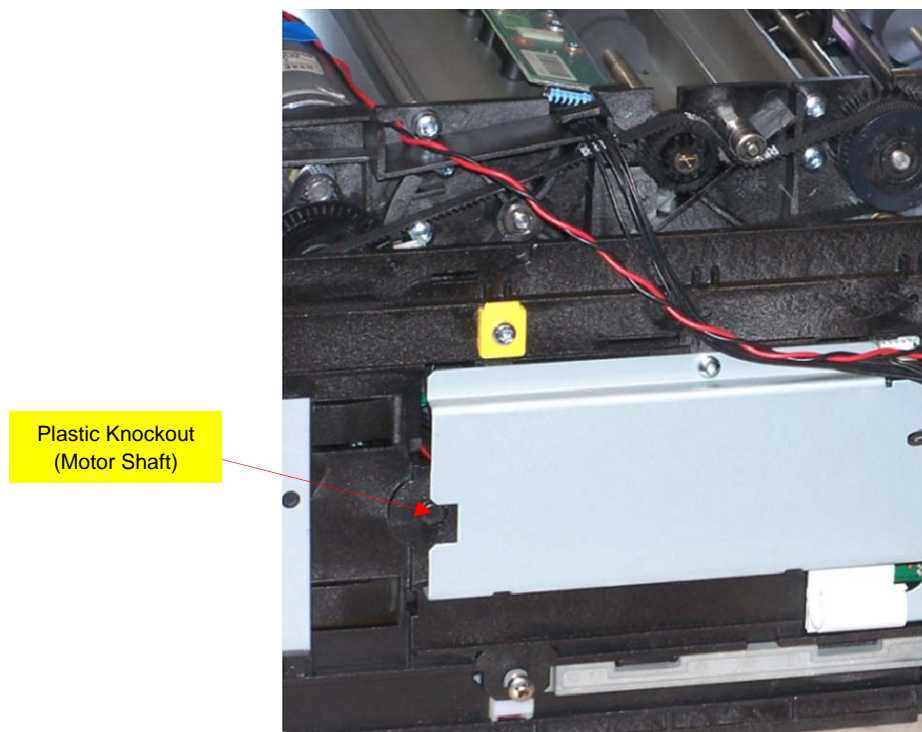

2. Insert the small flat blade screwdriver into the hole in alignment with the motor shaft that is now visible.
3. Turn the screwdriver clockwise until resistance is felt and then release the handle of the screwdriver and let it turn freely until it stops.
4. Turn the screwdriver counterclockwise two (2) full turns.
5. Try removing the cassette at this time.