



DeLaRue Bill Dispenser Maintenance

- Note Qualifier Baffle Closing Procedure
 - With yellow handle pulled toward you, close the Note Qualifier Baffle until front edge of baffle isn't visible
 - Push yellow handle back until metal tabs lock into position as shown

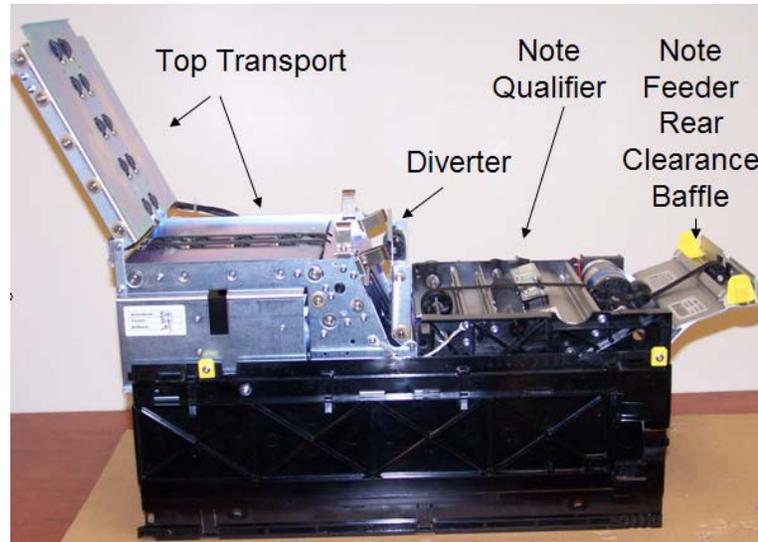

Bill Cassette

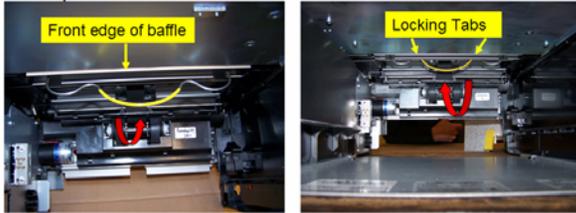

Sensor Cleaning

- Clean Sensors on each side of drive roll
- Clean clear light channel faces highlighted in blue
- Clean Sensors highlighted in red

Cassette Checks Pusher Plate

- Remove bills from Cassette
- Check that pusher plate touches end plate evenly
- Tilt cassette on its side - Look along top of pusher plate
- Check if Pusher plate is parallel with the side of cassette


Diagnostics

The Diagnostic Screen can be accessed to perform cassette Unlock and Cassette Clear Memory functions



- The cassette can be forced to unlock when the **Unlock** button is selected
- If the Bill Dispenser is rejecting a large amount of good condition dollar bills, select **Clear Memory**. Select yes to the confirmation prompt.
- A minimum of the first six (6) bills will be feed to the reject vault/tray during the self calibration process
- A maximum of fifteen (15) bills will dispensed to the reject vault/tray during the calibration attempt

- **Clear Memory** will erase the stored bill qualifier information
- **Unlock** can be used to force the Cassette locking mechanism to move to the unlocked position. Lock will then appear to force the Cassette to lock.

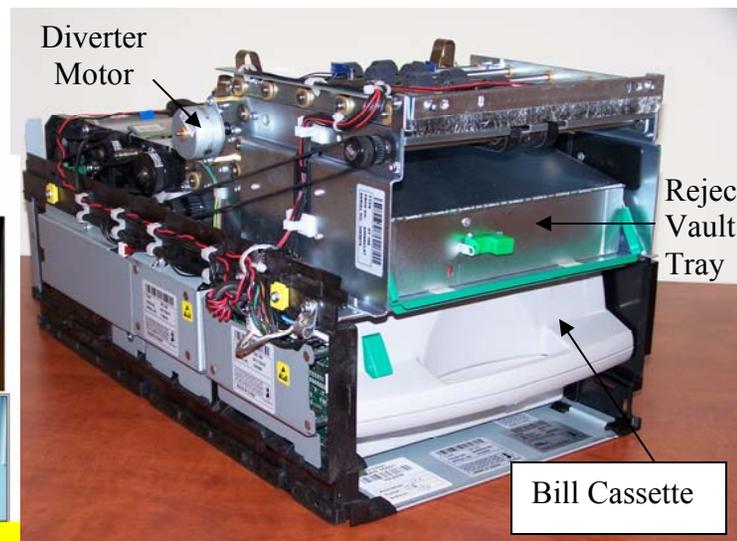

Power Reset Faults

- The Following Codes listed below require a Power Reset
- Disconnect power plug for 5 seconds then reconnect

Error Code	DeLaRue Error Code	Fault
10024	35	Diverter Failure
10028	39	Jam in Note Qualifier
1002C	43	Jam in Note Feeder Transport
1002F	46	Mail Motor Failure
10031	49	Note Qualifier Faulty
10038	57	Error in Throat
1003A	60	NMD Internal Failure
1003B	61	Cassette Lock Faulty
1003E	68	Error in Note Transport

