



Wire Connections for Multi-Cassette *DeLaRue*[®] Dispensers



Before You Begin

- Always turn the power to the unit off before you begin.
- Have someone available to help you lift the bill dispenser if necessary.
- A qualified ICS technician can help ensure these instructions are followed correctly. Contact ICS for support.

Required Tools

- Hex wrench to open the Auto Sentry *flex* side chamber.
- T10 *Torx*® driver.



Preparing a Work Surface

- Prepare a clean, solid work surface on which to position the bill dispenser.
- Work surface should be dry, protected and free from debris.
- Do not attempt to use the bare ground as a work surface.


Removing the Dispenser

- Open side chamber on unit.
- Extend tray.
- Access wiring.



Removing the Dispenser

- Disconnect power.

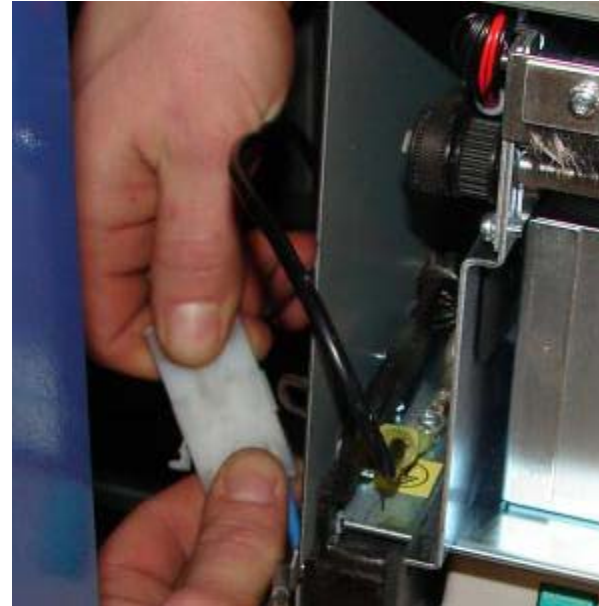


Removing the Dispenser

- Disconnect COM.





Removing the Dispenser

- Disconnect ground.

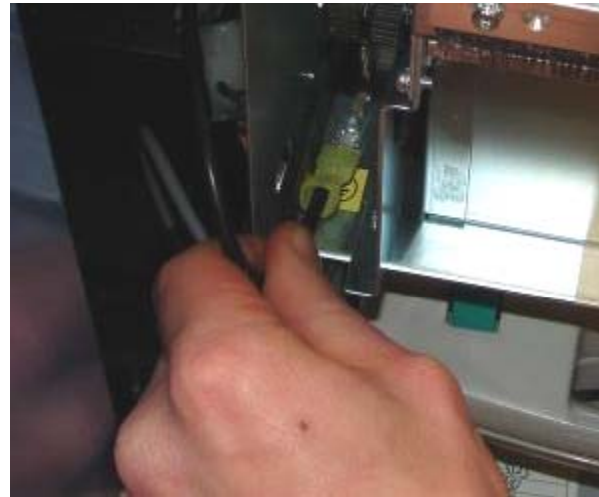

Removing the Dispenser

- Unclip harness.

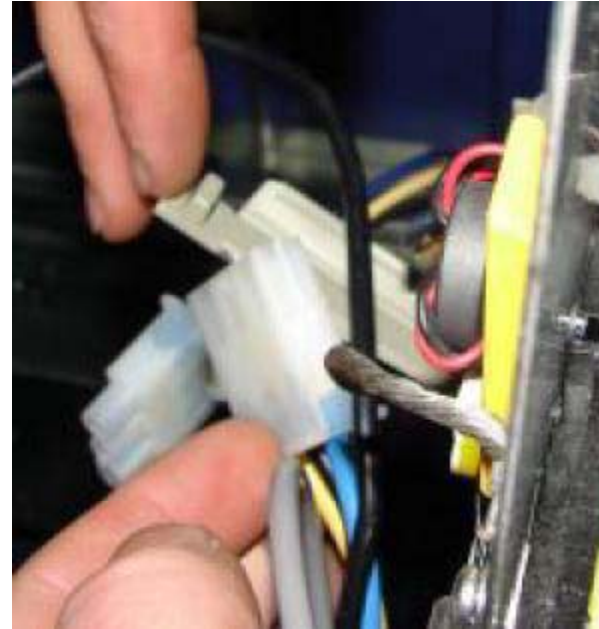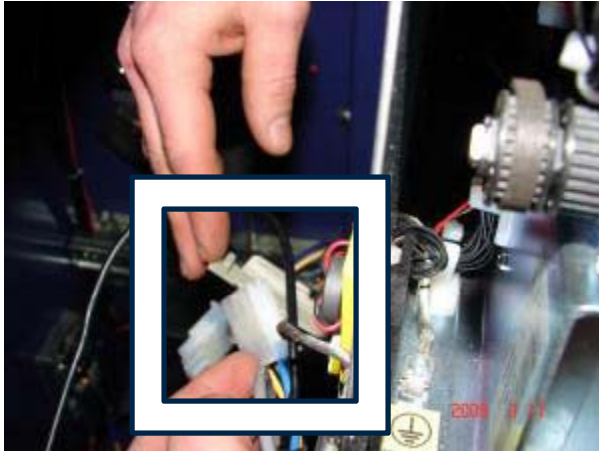


Removing the Dispenser

- Lift dispenser off tray.
- Place dispenser on secure work surface.



Removing the Plate

- Orient dispenser as shown.
- Locate top cover.
- Locate screw.

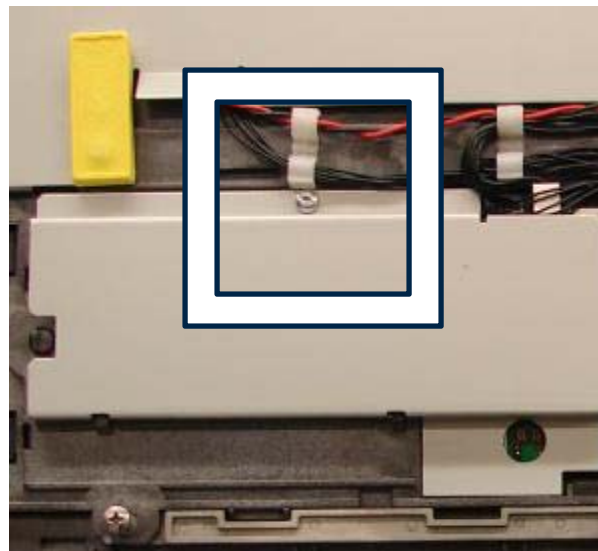


Removing the Plate


- Use T10 *Torx* driver.
- Remove screw.
- Remove cover to expose wiring.



Connecting the Wires

- Locate disconnected wires.

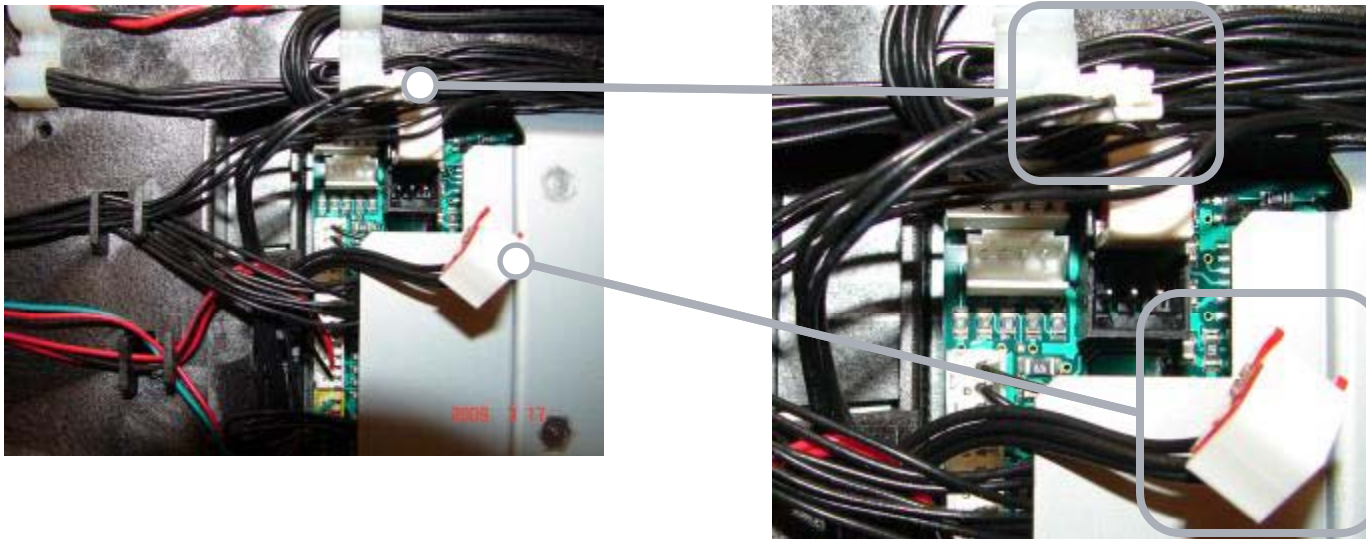


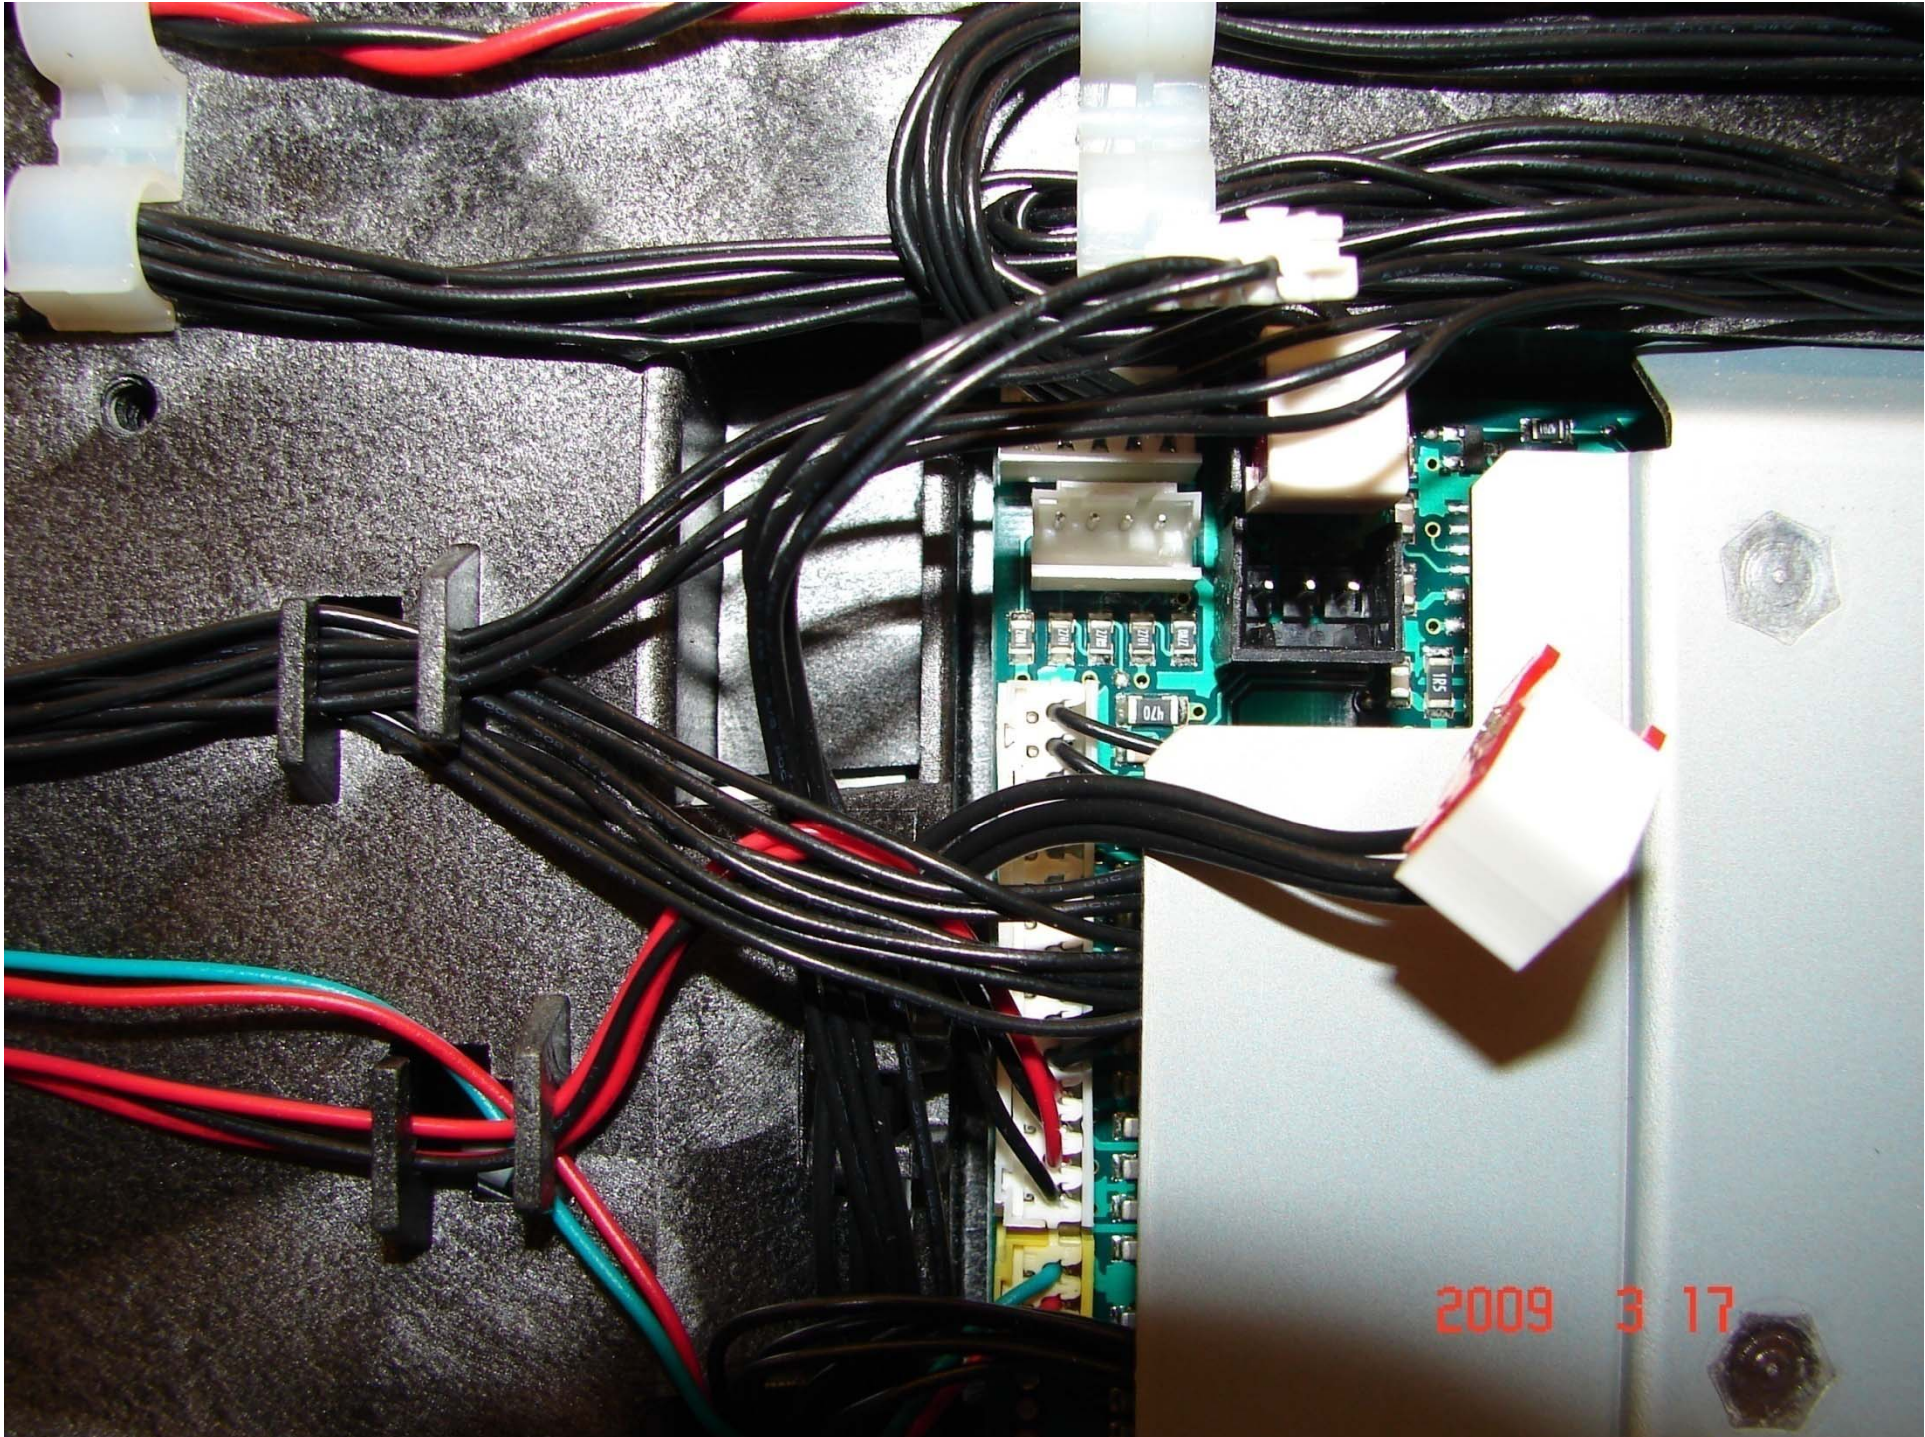


2009 3 17

Connecting the Wires

- Connect wires.
 - Smaller head is keyed. Fits only one way.
 - Larger head fits with wires facing down.
 - Do not force.

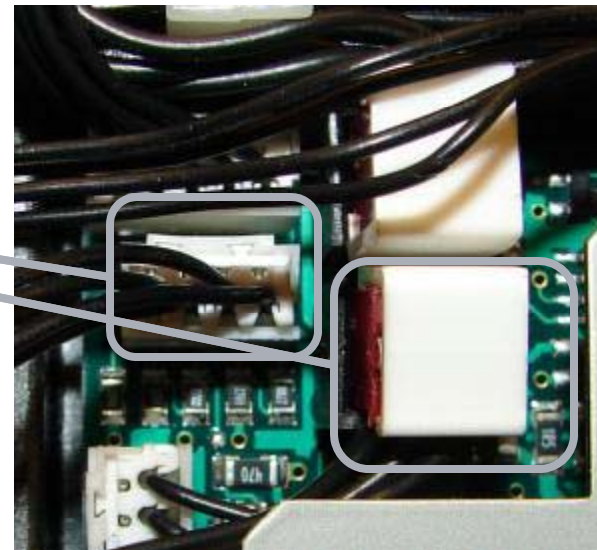

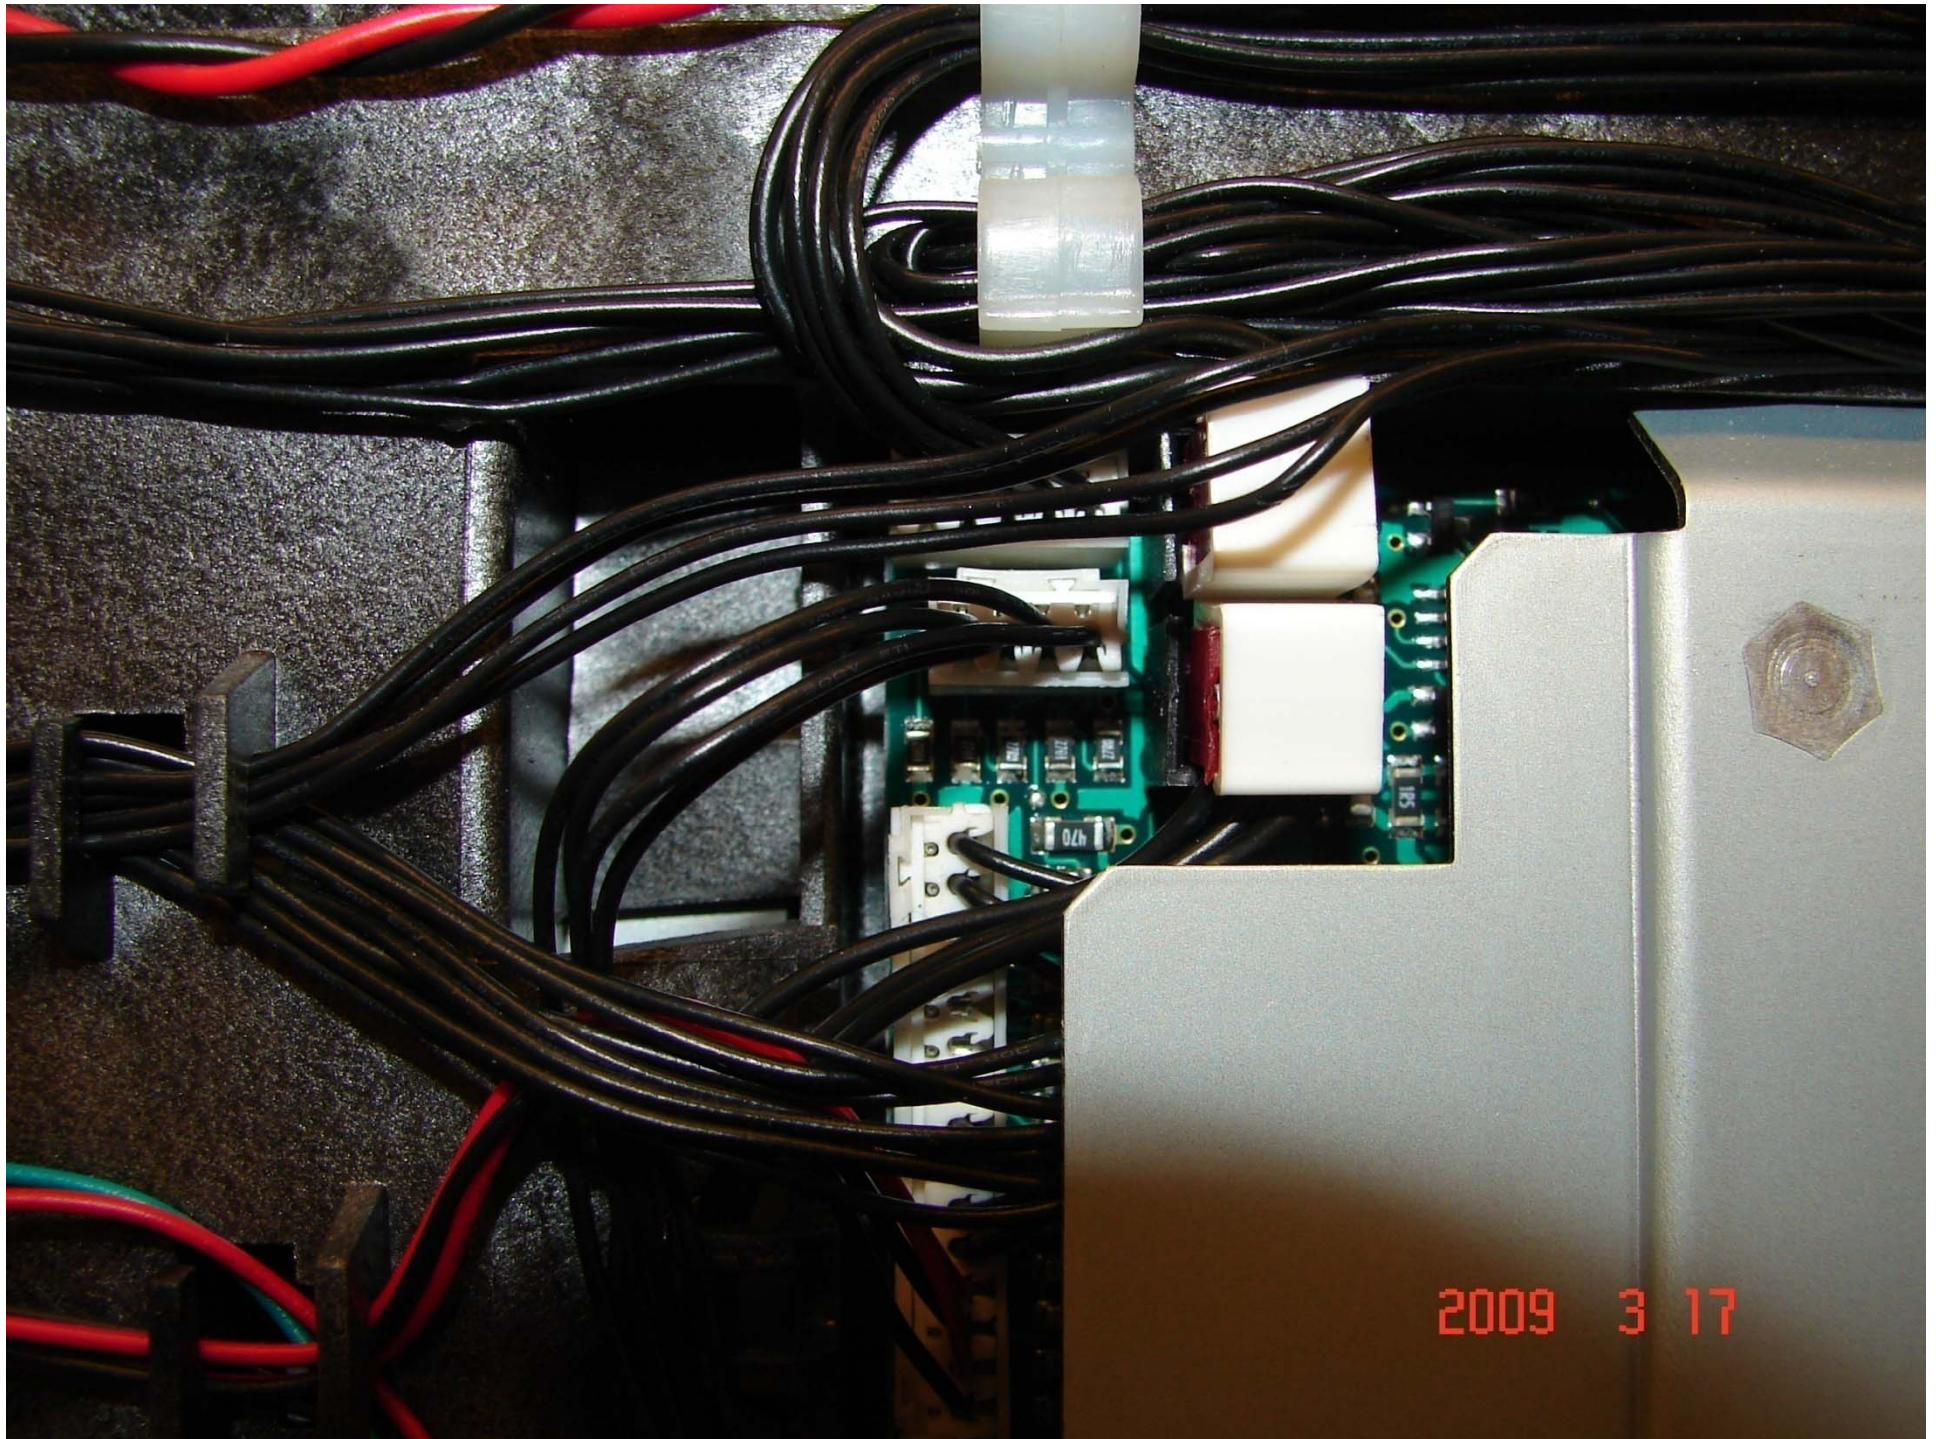

Connecting the Wires

- Use T10 *Torx* driver.
- Replace cover.
 - Do not pinch wires beneath cover.



Replace Bill Dispenser

- ✓ Reseat & secure bill dispenser on tray.
- ✓ Reconnect wires.
- ✓ Reclip harness.
- ✓ Close & lock door.
- ✓ Test.





- Information in this presentation is subject to change without notice. Companies, names and data used in examples within the presentation are fictitious unless otherwise noted. No part of this presentation may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Innovative Control Systems, Inc.
- ICS is not responsible for damage, bodily harm, loss of business, etc. due to the information contained in this document. Refer to the standard sales agreement and warranty information that came with your ICS product for more details.
- *Auto Sentry, Lube Master and Tunnel Master are registered trademarks of Innovative Control Systems, Inc.*
- *Touch 'N Clean and Wash Valet are trademarks of Innovative Control Systems, Inc.*
- *DeLaRue* is a registered trademark of De la Rue Holdings, plc
- *Torx* is a registered trademark of Acument Intellectual Properties, LLC LTD.